


Recessed Mount Intallation Guide of LED Disk Light

NOTE:


- 1 Read instructions carefully before installation.
- 2 Install by a qualified electrician.
- 3 Make sure the power is OFF before starting installation or attempting any maintenance.
- 4 Application space is with no chemical compositions such as sulphur,acid, halogen etc.
- 5 Two installation options are available: Recessed Mount / Surface Mount

Recessed Mount


STEP 1 Open the package and count the number of accessories.

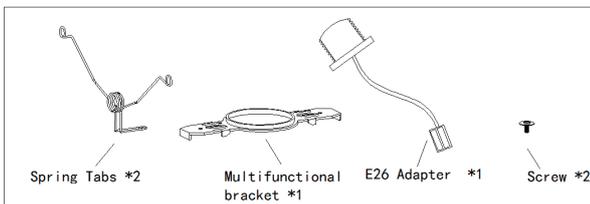


STEP 2 Take out the fixture and install the multifunctional bracket on the back of it.

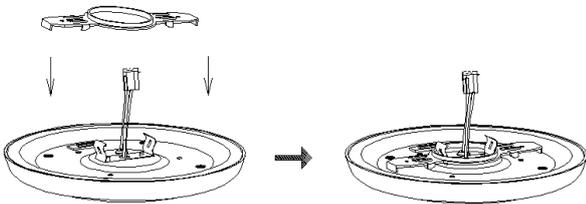


STEP 3 Take out the spring tabs and screws, and install them on the fixture.

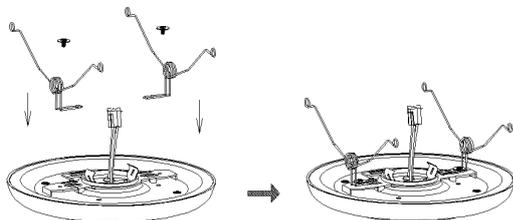


STEP 4 According to the base can, the screw can be loosened to make 4-5-6in adjustment, and the 4-inch adjustment requires the entire spring tabs to rotate 180°, then fix it after rotation.

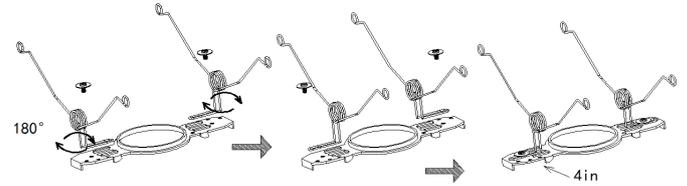


STEP 5 Take out the connecting terminal, and screw the E26 adapter to the recessed housing.

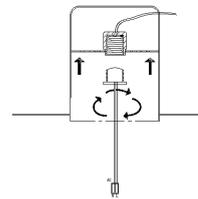


STEP 6 Take out the fixture and connect the male and female quick connector.

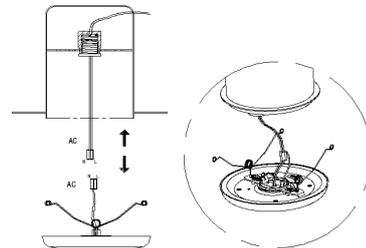

STEP 7 Press the spring tabs of the fixture and fix it on the bracket of the recessed housing.

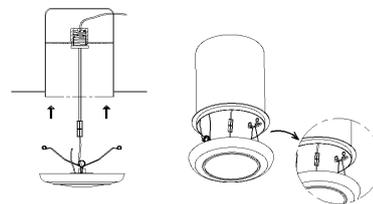


STEP 8 Fix the whole fixture into the recessed housing to make sure it's firmly connected. After the installation is complete, check the wiring is safe before turn on the power.

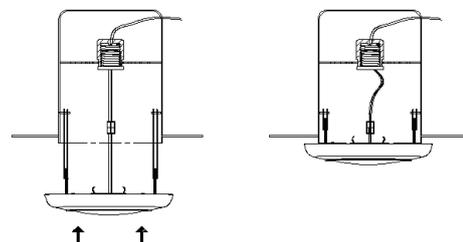


Surface Mount Installation Guide of LED Disk Light

Surface Mount


STEP 1 Open the package and count the number of accessories.

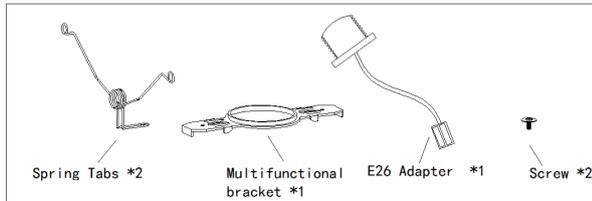


STEP 2 Fix the multi-functional bracket to the junction box with screws according to the square shown in the figure.

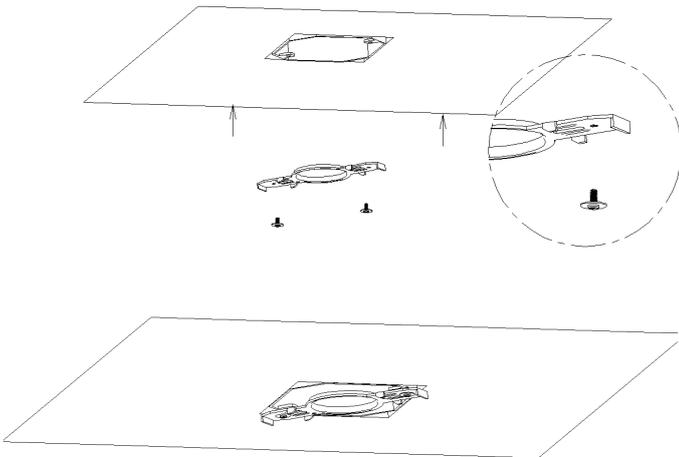


STEP 3 Use a scissor to cut off the E26 adapter, strip the wire to expose the 1CM of copper core.

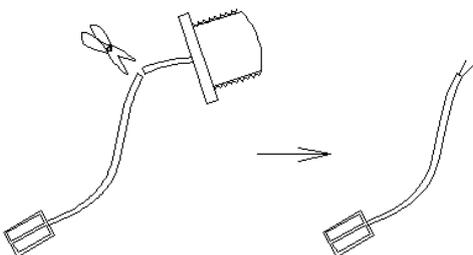

STEP 4 Take out the AC line from the junction box, and connect it with the terminal of Line, N line and G line; L to L, N to N, G to G, Wiring connection, insert the wires into existing wiring connector of the fixture.
Black=Line , White=Neutral , Yellow/Green=G.

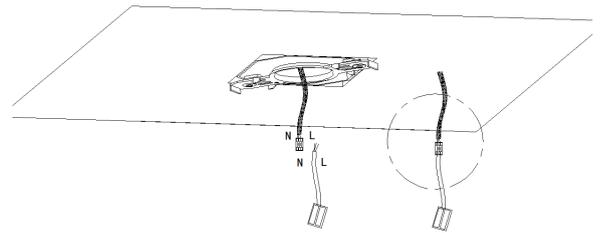

STEP 5 Take out the fixture and connect with male and female fast connector. After ensuring it's firmly connected, tidy the wires and install them on the multifunctional bracket.

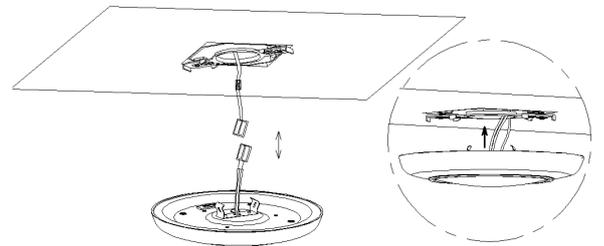

STEP 6 Make sure the installation is secure, then turn on the fixture.

