


Installation Instruction


STEP 1

Take out the mounting brackets and fix them on the wall with screws and wall plugs. The distance between the two brackets depends on the requirement on site.

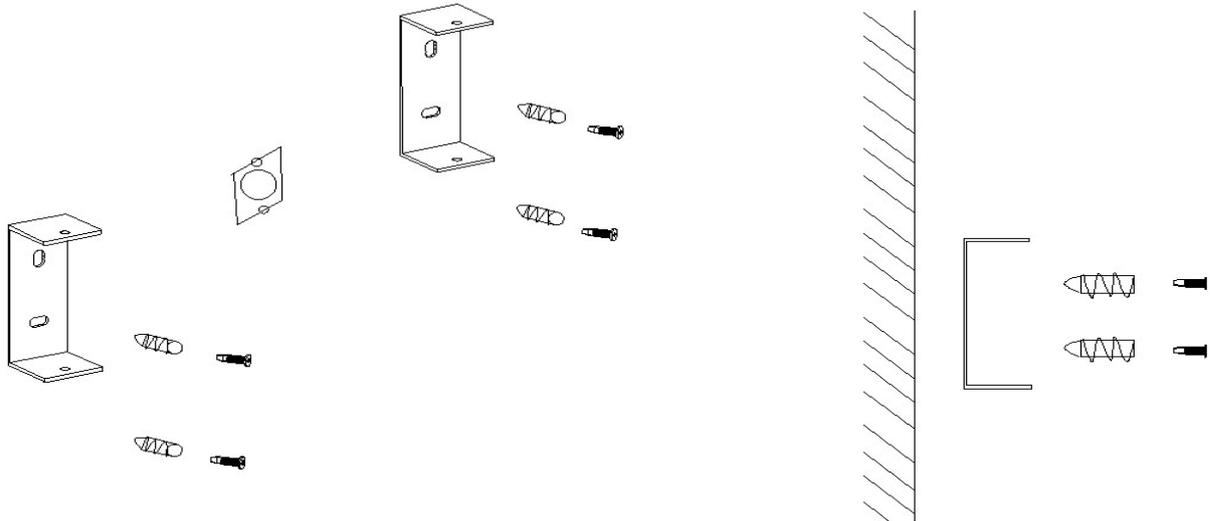

STEP 2

Take out the fixture, remove the back lift plate and pull out the AC terminals.

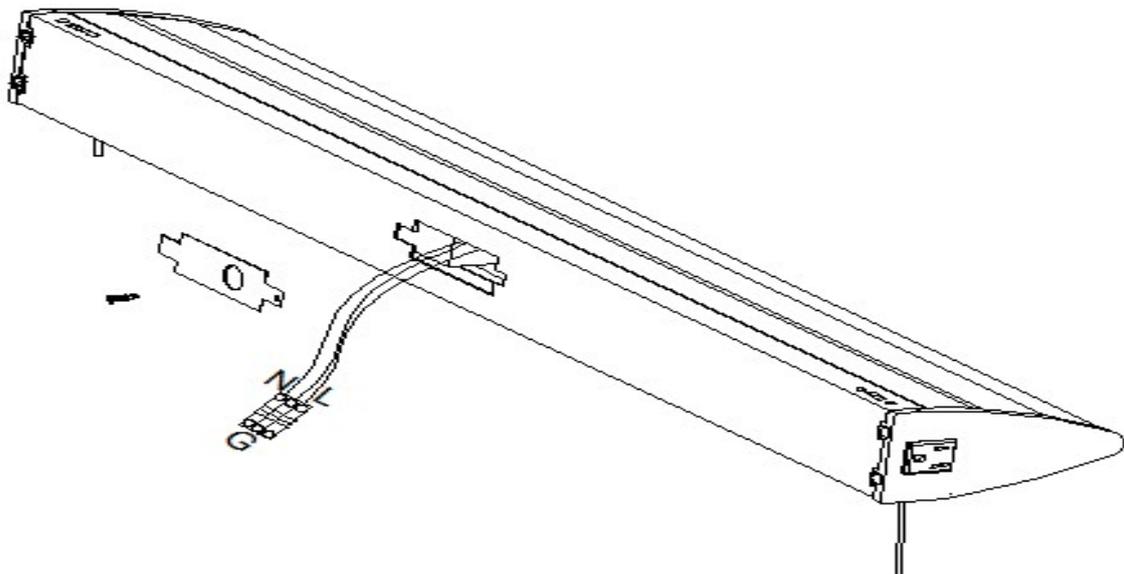


STEP 3

Turn off the power and make sure it's safe. Pull out the AC lines from the wall junction box and connect with the fixture terminals.

The L end is connected to the live wire, the N end is connected to the neutral wire, and the G end is connected to the ground wire.


Fix the back lift plate on the fixture on the bracket.

Push the fixture into the two pcs of brackets.

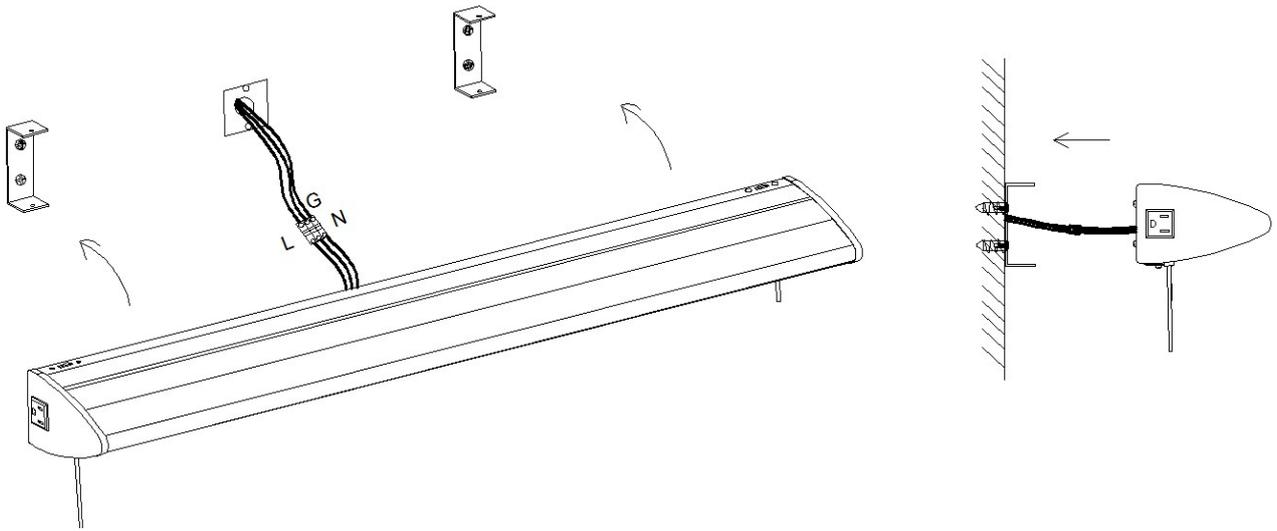

STEP 4

Fix the light fixture in place with the 4pcs of self tapping screws, each 2pcs for upwards and downwards and make sure it is secure.

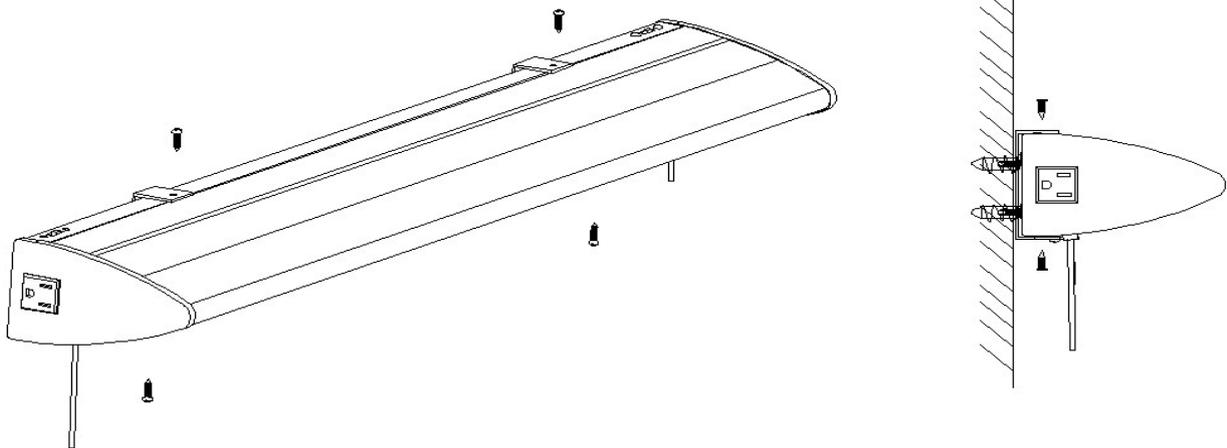

STEP 5

Make sure its safe, then turn on the fixture.

